

BRIOSS


Do not wash
with water.

CLEAR CLEANS BRUSH

BR-CLN02P

BR-CLN02B

BR-CLN02C

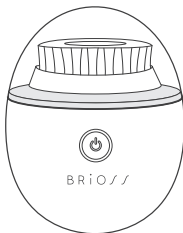

Product Manual

How to Keep

Thank you for your purchasing our product this time.

Please be sure to read this handling instructions carefully before using it and use it correctly. After reading it, please keep this manual.



⚠ WARNING

Lithium battery built in

- Do not disassemble or remove the battery
- Do not disassemble the product when disposing of it.
Please place it in a designated recycling collection box.

⚠ WARNING

The maximum temperature resistance for lithium battery is 60°C. Please keep the product away from high-temperature environments such as inside vehicles during summer or other hot locations. Exposure to temperatures above 60°C may cause damage or safety risks.

Safety Precaution

To prevent harm to people and damage to property, please be sure to follow these instructions.

■The degree of harm or damage caused by incorrect use is classified and explained as follows.



DANGER

Indicates a high risk of death or serious injury.



WARNING

Indicates a risk of death or serious injury.



CAUTION

Indicates a risk of minor injury or property damage.

■The instructions to be followed are indicated by the following symbols (examples):



Indicates actions that are prohibited.



Indicates actions that must be performed.



WARNING (Regarding Use and Storage)



PROHIBITED

•The following persons must not use this product.

There is a risk of causing malfunction of medical electronic devices.

◆Persons using medical electronic devices, such as:

- Implanted medical electronic devices (e.g., pacemakers)
- Life-support medical electronic devices (e.g., heart-lung machines)
- Wearable medical electronic devices (e.g., electrocardiographs)



WARNING (Regarding Use and Storage)



PROHIBITED

•The following persons must not use this product.

Doing so may cause accidents or trouble.

- Persons under medical treatment• Persons in the growth stage (minors)• Persons with acute illnesses• Persons with tuberculosis• Persons with fever
- Persons with high blood pressure• Persons with infectious diseases• Persons with malignant tumors• Persons with blood disorders• Persons with internal organ diseases• Persons with skin diseases• Persons with allergies

- Persons with atopic dermatitis• Persons with skin problems• Persons with sensitive or delicate skin• Persons with pathological pigmentation caused by physical irritation
- Persons with severely sunburned, inflamed skin
- Persons with severe myopia (-6D or stronger)• Persons who have had eye or facial surgery• Persons with eye or facial diseases or currently receiving treatment
- Persons suffering from extreme fatigue• Persons in poor physical condition• Persons under the influence of alcohol• Persons who are pregnant, menstruating, or breastfeeding
- Persons taking medication that causes drowsiness• Persons who have long-term use of steroid hormone medications or who have capillary dilation due to liver dysfunction
- Persons who have experienced skin irritation from synthetic fibers• Persons with metal, plastic, silicone, etc., implanted under the skin



WARNING (Regarding Use and Storage) _____



PROHIBITED

- Do not use on areas other than the specified body parts or on the following areas.**

Doing so may cause accidents or trouble.

- Areas with cuts or surgical scars• Inside the mouth, genital area, or mucous membranes• Acne-affected areas

- Areas where the skin is festering or inflamed

- Areas with itching or flushing• Raised moles• Viral warts• Adam's apple

- Over implants• Eyeballs• Eyelids• Head/scalp

*If you are unsure whether the product is suitable for you, consult a physician before use.

- Do not use excessively or continuously (such as for commercial/professional purposes).**

This may cause injury or fever. Excessive use may damage the skin.

- Do not throw into fire, heat, charge at high temperatures, use at high temperatures, or leave in high-temperature environments.**

This product contains a rechargeable battery. Doing so may cause overheating, ignition, or explosion.



PROHIBITED

- **Never bring the product into a sauna or stone spa (ganbanyoku).**
The main unit may become extremely hot, causing injury or burns.
- **Do not immerse in water or leave submerged. Do not charge or leave the product in a bathroom or near containers filled with water.**
Water may enter the unit, causing electric shock, short circuit, fire, or malfunction.



RESTRICTIONS
ON USERS

- **Store the main unit, charging stand, and cable out of reach of infants. Do not allow children to use or play with the product.**
Failure to do so may result in accidents or injury.
- **Do not allow use by persons who are unable to express their own intentions or who have reduced skin sensitivity. Do not allow children or physically disabled persons to use the product alone. Minors must use the product only with parental/guardian consent and under supervision.**
Failure to follow these instructions may result in electric shock, injury, or burns.
- **For hygiene reasons, do not share the product with multiple people.**



Use only for its
intended purpose

- **Do not use for purposes other than those described in the instruction manual.**
Doing so may result in injury or malfunction.



WARNING (Regarding Use and Storage) _____



DO NOT
DISASSEMBLE

- **Do not disassemble, repair, or modify the product.**
This may cause fire, electric shock, or injury. For repairs, consult the retailer where you purchased the product. Once disassembled, the product will no longer maintain its waterproof performance.



Do Not Use

- **Do not use the product if it emits an unusual odor or becomes abnormally hot.**
This may cause damage or fire.



FIRE
HAZARD

- **Do not use, charge, or leave the product near fire, in direct sunlight, or in dusty areas. Do not place it near heating appliances.**
This product contains a rechargeable battery. Doing so may cause overheating, ignition, explosion, or malfunction.



DO NOT
DROP

- **Do not place heavy objects on the product or subject it to strong impacts, such as dropping it during use.**
This may cause injury or malfunction.



- **Do not place or charge the product in unstable locations.**
This may cause malfunction. Dropping it on your foot or other body parts may cause damage or fire.



- **Do not place the product in a microwave oven or high-pressure container.**
This may cause overheating, ignition, or explosion.



- **Before charging, thoroughly wipe any moisture from the main unit and charging stand with a dry cloth.**
Failure to do so may result in electric shock, short circuit, fire, or malfunction.



CAUTION (Regarding Use and Storage) _____



- **Do not use the product if it is cracked, damaged, or malfunctioning.**
This may cause skin injury.
- **Do not wipe the product with solvents such as alcohol, thinner, benzene, or nail polish remover.**
This may damage the surface of the product.
- **Do not use in hot spring water or water containing bath additives.**
This may cause malfunction.
- **Do not leave the product turned on while placed on the floor, furniture, etc. After use, always turn off the power.**
Failure to do so may cause damage to furniture or injury.
- **Do not expose the product to boiling water or hot air from a hair dryer.**
This may cause deformation or melting of the product.



CAUTION (Regarding Use and Storage) _____



- **Do not use on the same area for more than 10 minutes at a time.**
If using again on the same area, wait at least 24 hours before the next use.
Failure to do so may cause injury or malfunction.
- **Never use oils with this product.**
This may cause malfunction.
- **Do not press hard or rub the product forcefully against the skin.**
This may damage the skin.

- **Do not use facial cleansers containing scrubs or peeling agents.**
This may damage the skin or cause malfunction.
- **Do not use on pets.**
This may cause injury.



WARNING (Regarding Power Supply)



Do Not Use
Damaged
Cord or Plug

- **Do not use the charging stand or cable if they are damaged, or if the USB plug fits loosely.**

This may cause electric shock, short circuit, fire, or malfunction.
For repairs, consult the retailer where you purchased the product.



Unplug

- **If any abnormality occurs, immediately turn off the main unit. If charging, unplug the USB plug immediately.**

Do not continue using the product if there is smoke, unusual noise, unusual odor, or any other abnormal condition.

- **When unplugging the cable, always hold the plug itself and pull it out. Do not plug or unplug with wet hands.**

This may cause electric shock, short circuit, fire, or malfunction.



Keep Away
from Water

- **Do not allow water or other liquids to come into contact with the product. Do not immerse in water or wash with water.**

This may cause electric shock, short circuit, fire, or malfunction.



- **Do not damage, modify, excessively bend, pull, twist, or bundle the charging stand or cable.**

Do not place heavy objects on them or pinch them. Improper handling may cause damage to the charging stand or cable.



MANDATORY

- **Before charging, make sure that there is no water attached to the charging stand or USB terminal.**

This may cause electric shock, short circuit, fire, or malfunction.

- **When not in use or when cleaning the product, always turn off the power.**

This may prevent electric shock, short circuit, fire, or malfunction.

- **If you feel an earthquake or hear thunder, stop using the product immediately and turn off the power. If charging, unplug the USB terminal.**

Name of parts

Main Body



Brush head cover

Brush (normal type)

Power button

 
*Press Power button (green light will blink), every press on power button changes the mode.

*Power will turn off automatically after 1 minute

Attachments



Charging stand



USB cable



Soft Brush



Silicone Brush


Specifications

Product Name	BRiOSS Clear Cleans Brush N
Model Number	BR-CLN02P/BR-CLN02B/BR-CLN02C
Power Mode	Charging
Charging Time	1.5 hours *depends on the charging environment, charging time may vary
Rechargeable Battery	Lithium Battery 3.7V, 450 mAh
Electricity Consumption	5W
Auto Off	1 minute
Size	80*62*62 mm
Weight	Device only 62.5/ With Brush 110g
Waterproof function	IPX7
Accessories	Charging Stand, USB cable, Brush Head x3, Product manual
Material	Main body: ABS Charging Stand: ABS

How to charge

Please make sure the power is off while charging

During first use, the battery is not full so please charge it before use.

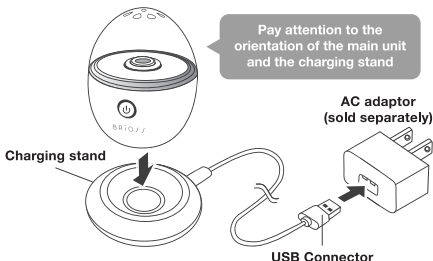

{Note} Device cannot be used while charging

- ① Insert the USB connector firmly into each port.
Place the main unit on the charging stand to start charging.**
- ② Charging is complete in approximately 1.5 hours,
and the power button lights up green.**

*While charging, the power button lights up red.

*Charging time may vary depending on the battery condition.

*Remove the USB connector from each port.



CAUTION

- The recommended charging temperature is 15°C to 35°C.
Charging time may become longer or charging may not occur outside the recommended temperature range.
- When using the unit for the first time or after not using it for more than six months, charging time may vary.
- If noise occurs on a radio or similar device during charging or use, change the location before using the unit.

Before Use

Estimated Usage Time

•Use twice a day, for no more than 1 minute each time over the entire face.

*Be sure to follow the recommended frequency and duration of use.

⚠ CAUTION

- If you are using the device for the first time or have not used it for a long period, be sure to perform a patch test.

How to Perform a Patch Test

Please check whether your facial cleanser and the device are suitable for your skin.

- ① Wash the inside of your arm with soap and keep it clean. Wipe off any moisture with a towel.
- ② Follow the instructions in "How to Use" (page 10) and use the device on the inside of your arm.
- ③ If no skin problems occur after 24 hours, you may continue using the device. If any skin trouble appears, discontinue use.

- Remove accessories (necklaces, earrings, etc.) before use.
- Always remove makeup before using the device.
- Do not use facial oils or cleansers containing scrubs or peeling agents. Doing so may cause device malfunction or skin problems.

How to Attach and Remove the Brush Head

•Make sure the power is turned off before attaching or removing the brush head.

Attaching

Align the protruding part on the back of the brush head with the mounting part of the main unit, and press it straight in until you hear a click.



Removing

Hold the main unit firmly and pull the brush head straight off.



How to Use

- 1 **Attach your preferred brush head to the main unit. (See page 9.)**
- 2 **Thoroughly wet your face and the brush. Lather your usual facial cleanser and apply it to your skin.**
- 3  **Turn on the power and select a mode.**

*Each mode can be switched with a single press of the power button. After use, press and hold the power button to turn it off.

Mode 1: Soft Mode

Gently cleanses the skin with low-speed vibration.

Recommended for first-time users and those with sensitive skin.

Mode 2: Clean Mode

The basic mode. Uses medium-speed vibration to remove dirt that cannot be fully cleaned by hand.

Mode 3: Deep Clean Mode

Mode 3: Deep Clean Mode

Uses high-speed vibration to target stubborn pore impurities.

- 4 **Lightly touch the brush to your skin and slowly move it in circular motions.**



CAUTION

- Do not press the brush strongly against the skin. Doing so may cause skin trouble.
- Do not use on the eyelids or around the eyes.



Basic Cleansing Method

Divide the face into three zones (as shown in the illustration) and apply the brush to each area. Use for about 20 seconds per zone, and no more than 1 minute for the entire face.



[Timer Notification Function]

The device briefly pauses every 20 seconds to indicate the recommended cleansing time.

- 5 **After cleansing, turn off the power (press and hold the button), then rinse the cleanser off your skin and the main unit.**

After use, be sure to remove and wash the facial brush head as well.

Care and Storage



WARNING

•Always make sure the power is turned off (indicator light off) before performing any maintenance.

How to Clean the Main Unit and Brush Head

- ① Remove the brush head from the main unit.
Rinse off any remaining facial cleanser with water, then dry it thoroughly.



- ② Wash the main unit with lukewarm water or water, and rinse it well under running water.



- ③ Wipe the main unit with a towel and let it dry. Make sure both the brush head and the main unit are completely dry before reattaching the brush head.



CAUTION

- Using the device while moisture remains may cause injury, malfunction, or accidents.
- When disposing of the device, if there is remaining battery charge, use the device repeatedly until the battery is fully depleted and it no longer turns on.

Troubleshooting?

Before requesting repair or service, check the following points.
Never disassemble, repair, or modify the device yourself, as this may cause malfunction, injury, or accidents.

If This Happens	What to Do
The power does not turn on when the power button is pressed.	Is the device charged? (See page 8.)
The device only operates for a few minutes even after charging.	The battery may be reaching the end of its life. (See page 8.)
	Please contact our customer service center.
Charging does not start (the power button does not blink red)	Make sure there is no gap between the main unit and the charging stand.
	Check that the USB terminal is not damaged.
The power turns off during use.	Is the battery depleted? (See page 8.)
	The device has an auto-off function. It automatically turns off 1 minute after being powered on.