

 
BRIOSS

Do not wash
with water.

HOT EYELASH CURLER

BR-HEC2511W

BR-HEC2511P



Product Manual

How to Keep

Thank you for your purchasing our product this time.

Please be sure to read this handling instructions carefully before using it and use it correctly. After reading it, please keep this manual.



▲WARNING

Lithium battery built in

- Do not disassemble or remove the battery
- Do not disassemble the product when disposing of it.
Please place it in a designated recycling collection box.

▲WARNING

The maximum temperature resistance for lithium battery is 60°C. Please keep the product away from high-temperature environments such as inside vehicles during summer or other hot locations. Exposure to temperatures above 60°C may cause damage or safety risks.

Safety Precaution

To prevent injury to the user or others, and to avoid damage to property, please follow **all** safety instructions in this manual.

Meaning of warning signs

The following signs show the extent of harm and damage caused by when ignoring and using it incorrectly.



WARNING

This symbol shows that there might be a chance of death or severe injury



Symbol indicating prohibition



CAUTION

This symbol shows that there might be a chance of personal injury or where only property damage may occur.



Symbol indicating mandatory action



WARNING



PROHIBITION

- **Do not store within the reach of infants or children, and do not use on them. Do not use on pets.**
Doing so may cause accidents or injuries.
- **Do not use product as other usage than eyelash curler.**
- **Do not use if you have eye conditions such as conjunctivitis.**
- **Do not use this product when wearing contact lenses.**
It may cause eye injury
- **If you experience any abnormality in your eyes or eyelids during or after use, stop using immediately and consult a doctor.**
There is a risk of burns or injury.
- **Do not disassemble, repair or modify the product.**
There is a risk of burns or injury.
- **Do not use for purposes other than those described in the instruction manual.**
This may cause injury or damage to the product.
- **When storing the product, do not wrap the USB cable around the main unit.**
Excessive strain may damage the cable, leading to fire caused by short circuits.



WARNING



PROHIBITION

- **Do not push the silicone pad with eyelids.**
It may cause burns.
- **Do not use and keep product in high temperature places eg: vehicle under the Sun or besides open fire.**
It may cause ignition, overheating, burns and malfunction.
- **Do not place spray cans or similar items near the main unit.**
This may cause ignition or fire.
- **When unplugging the USB cable, hold the plug itself and do not pull on the cable.**
Do not plug or unplug with wet hands.
Failure to do so may result in electric shock or fire due to short circuits.
- **Do not throw the main unit or battery into fire, or heat it using a microwave oven, dryer, or similar appliances.**
This may cause ignition, explosion, burns, or malfunction.
- **Do not use the USB cable if it is damaged. Do not damage, modify, bundle, or apply excessive force to the USB cable. Also do not place heavy objects on it, handle it roughly, or pinch it.**
This may cause electric shock or fire due to short circuits.
- **Do not use or store the product in bathrooms or places with high humidity.**
Also do not place it where it may be exposed to water.
This may cause electric shock or fire.
- **Do not use the product in unstable locations.**
Also, do not drop or hit the main unit or accessories.
Doing so may cause injury or damage to the product.
- **Do not allow liquids, metal objects, foreign materials, or dust to enter or adhere to the main unit or the USB port.**
This may cause electric shock or fire due to short circuits.



WARNING



MANDATORY
ACTION

- **If you notice any abnormality with the main unit or USB cable, such as unusual odors, strange noises, or excessive heat, immediately unplug the USB cable and stop using the product.**

Failure to do so may result in damage or fire.

- **Do not use the product while sleeping.**

This may lead to unexpected accidents or cause low-temperature burns.

- **When using the product around other people, be mindful of sudden movements.**



CAUTION



MANDATORY
ACTION

- **Always turn off the power when the product is not in use.**

Failure to do so may result in damage or fire.

- **Always use the USB cable that is attached with the product. Do not use attachments from other brand.**

Doing so may cause malfunction or accident.

- **Do not use product when driving, sleeping and drinking.**

This may lead to unexpected accidents or injury.

If using the product in a vehicle, use it only when not driving, such as during breaks.

- **Do not strike the main unit or battery, place heavy objects on it, step on it, drop it, or subject it to strong impact or force.**

Doing so may cause malfunction or accident.


- **If the product will not be used for an extended period, fully charge the battery before storing it.**

Also, operate the product once a month and recharge it.


If it is not charged for a long time, it may be no longer be able to charge properly.

Name of parts

Main Unit

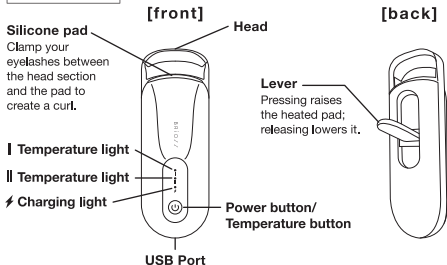

Attachments

 

Specifications

Product Name	BRiOSS Hot Eyelash Curler
Model Number	BR-HEC2511W / BR-HEC2511P
Power Mode	Charging
Charging Time	90 minutes
Rechargeable Battery	Lithium Battery 3.7V, 500 mAh
Electricity Consumption	1W
Auto Off	five minutes
Temperature Level	Level 1: approximately 65 °C Level II: approximately 85 °C
Size	112*40*19.2 mm
Weight	40g
Accessories	USB cable, Product manual
Material	Main body: ABS, PC, silicone

Before Use (how to charge)

Before first use or during low battery, please charge the unit while turning off the power. During the first time use, the battery is not fully charged, please charge it before use.

•Charging time

Charging time
approximately 90 minutes

•LED lamp (during charging)

Red light	Green light
Charging	Finished charging



CAUTION

- Recommended charging temperature is 15~35 °C
Charging outside of recommended temperature may cause longer charging time, or may not be charge.
- During the first use or when unit is not in used for half year and above, the charging time will change.
- If you experience static or interference on a radio or other devices while charging or using this product, please change locations before continuing use.

- ① **Charge the unit with Type C connector from the cable that is attached.**
- ② **Type A connector on the USB cable should be use to connect AC adaptor.**
*For power supply, please use USB port (5V/2A) on laptop, powerbank, electric output. Power supply that is under 2A, the charging time may be longer. In addition, there are some laptops, powerbanks or AC adaptor that do not support charging. Using fast charging adaptor may cause malfunction, please refrain from using.
- ③ **Plug in the AC adaptor to the electric output socket, start charging.**
*When it is charging, the red light will be lighten.
Green light shows that the battery is charged.
*Make sure the power is off while charging. If the LED light does not lighten up, it means the unit is not charge correctly. Change the power supply and try charging again.
- ④ **After charged, remove the AC adaptor from the electric output, and remove the USB cable as well.**


Instruction for use

CAUTION

- Using this product after mascara may cause eyelid or skin abnormalities, please stop using it immediately.
- The heat-activated color-changing pad becomes hot, so do not press it firmly against your eyelids.
- When using with mascara on, make sure the mascara is completely dry before use.
- If there is any abnormalities in your eyes or eyelids during or after use, please stop using immediately and consult doctor.
- Do not use on eyelash extensions, they may deform.

Use while looking into the mirror, to avoid any injury.

- Position the mirror in front of you, tilt your chin upward, and use the device with your eyes slightly lowered.
- Until you are familiar with the motion, practice how to move the device without turning the power on.

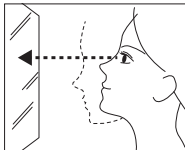

- ① **Press and hold the Power / Temperature button.** 
Wait about 10 seconds for the silicone pad to warm up.



*You can adjust the temperature by pressing the button.
Temperature settings: 2 levels

Level I: 65 °C

Level II: 85 °C

*Temperature tolerance: ± 15 °C power supply and try charging again.

- ② **Select your preferred temperature.**
When the silicone pad changes to a light pink color, it is ready for use.

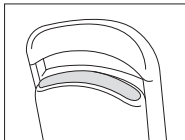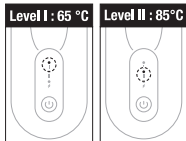


Instruction for use

- ③ Press up the lifting lever on the back of the main unit.

Place the silicone pad at the base of your eyelashes, then press the lever down to clamp all of the lashes.

Slightly lift the unit and hold it for a few seconds, then release the lever.

*By positioning the silicone pad close to the roots of the lashes, you can achieve a cleaner, more defined curl.

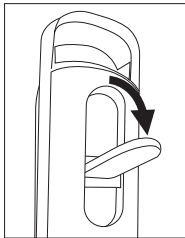

- ④ **Curling your lashes**


Divide eyelashes into three sections- root, middle and end. Curl them gradually toward the ends to set the shape.

*Do not push the lever too forcefully.

Pressing harder will not improve the curling effect.

*The way eyelashes curl varies from person to person.

If your lashes don't lift enough, try holding them in place for a little longer.

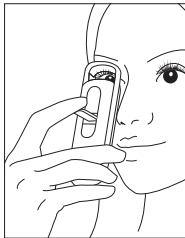

- ⑤ **Use mascara to enhance the effect if needed.**

- ⑥ **Always turn the unit off when not in use.**

Long press power button.

How to Keep / Storage Instructions

How to Keep

- Never wash the main unit or its accessories with water.
- The silicone pad cannot be replaced, so do not pull it out or tug on it.
- If the silicone pad becomes dirty, gently wipe it with a damp tissue or alcohol.
- It is recommended to clean the device after every use.
If mascara hardens and builds up, it will become difficult to clean.
- Do not use solvents such as alcohol, thinner, or benzine.
Doing so may cause malfunction, cracking of parts, or discoloration.
- To prevent deterioration or damage, avoid direct sunlight when storing or drying the device.
- Due to the nature of the materials, the body of the unit may discolor over time; however, this does not affect quality or performance.
(This is not covered under warranty.)

Storage Instructions

- When not in use, turn off the power and unplug the USB cable from the unit before storing.
- Do not leave the device near fire, under direct sunlight, in bathrooms, inside vehicles, or in other hot and humid places. Store it in a clean, well-ventilated, shaded area.
- Keep out of reach of children.
- If not using the device for a long period, clean it and fully charge it before storage. Also, operate the device and recharge it once every month. If it is left uncharged for a long time, it may no longer be able to recharge. Due to the characteristics of the battery, it will gradually discharge even when not in use, so the remaining charge will slowly decrease during storage.