 


# BRIOSS

Do not wash with water.

## MOBILE HAIR IRON

BR-MBI2611P

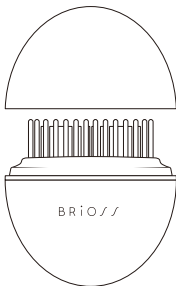

## Product Manual

How to Keep

Warranty

Thank you for your purchasing our product this time.

Please be sure to read this handling instructions carefully before using it and use it correctly.

After reading it, please keep this manual.



### ⚠ Warning

Lithium battery built in

- Do not disassemble or remove the battery
- Do not disassemble the product when disposing of it.  
Please place it in a designated recycling collection box.

### ⚠ Warning

The maximum temperature resistance for lithium battery is 60°C. Please keep the product away from high-temperature environments such as inside vehicles during summer or other hot locations. Exposure to temperatures above 60°C may cause damage or safety risks.

# Safety Precaution

To prevent injury to users and others, as well as damage to property, please be sure to follow the precautions described below.

## Meaning of Warning Labels

The following labels indicate the severity of potential injury or damage that may result from improper use of the product.



### **WARNING**

Indicates a potentially hazardous situation that could result in death or serious injury.



### **CAUTION**

Indicates a potentially hazardous situation that could result in minor injury or property damage only.



Prohibited actions



Mandatory actions



## **WARNING**



Prohibited

- Do not store the product where infants or children can reach it, and do not allow them to use it.  
Do not use it on pets.

Failure to do so may result in accidents or injury.

- Do not allow children or individuals who require assistance to use the product unless they are supervised or instructed by a person responsible for their safety.

Failure to do so may result in electric shock, injury, or burns.

- Do not use this product for commercial purposes.  
Do not place it in locations where it may be used by an unspecified number of people.

Doing so may cause malfunction.

- Do not leave the USB cable connected when the product is not being charged.

Doing so may cause electric shock or fire due to insulation deterioration or electrical leakage.

- Do not disassemble, repair, or modify the product.

Doing so may cause fire, electric shock, injury, or malfunction.

- If the product has been dropped, struck, or otherwise damaged, do not continue using it.

Doing so may result in burns or injury.

- Do not use the product for any purpose other than those described in this instruction manual.

Doing so may result in injury or damage to the product.

- Do not wrap the USB cable around the product when storing it.

This may place stress on the cable, causing wire breakage and potentially leading to a short circuit or fire.



## WARNING

---



Prohibited

- **Do not spray hairspray, flammable hair products, or similar substances on the device while it is in use.**  
This may cause fire, electric shock, or burns.
- **Do not use the device near flammable materials such as thinner, benzene, or aerosol sprays.**  
Doing so may result in ignition, fire, or explosion.
- **Do not store or use the device in high-temperature locations (such as near a fire or inside a vehicle exposed to direct sunlight).**  
This may cause ignition, overheating, burns, or malfunction.
- **Do not place aerosol cans or similar pressurized containers near the device.**  
This may cause explosion or fire.
- **When unplugging the USB cable, hold the connector and do not pull on the cable itself.**  
**Also, do not plug in or unplug the cable with wet hands.**  
Failure to do so may result in electric shock or fire caused by a short circuit.
- **Do not place the device or battery in fire, or heat them in a microwave oven, dryer, or similar appliance.**  
This may cause fire, explosion, burns, or malfunction.
- **Do not use the USB cable if it is damaged.**  
**Do not damage, modify, bundle, or apply excessive force to the USB cable.**  
**Do not place heavy objects on it, handle it roughly, or pinch it between objects.**  
Failure to do so may result in electric shock or fire caused by a short circuit.
- **Do not use or store the device in bathrooms or other humid locations.**  
**Also, do not place it where it may be exposed to water.**  
This may cause electric shock or fire.
- **Do not immerse the device in water or wash it with water.**  
This may cause electric shock or fire due to a short circuit.
- **Do not use the device on an unstable surface.**  
**Also, do not drop the device or its accessories, or subject them to impact.**  
Doing so may cause injury or damage to the device.
- **Do not allow liquids, metal objects, foreign matter, or dust to enter or accumulate in the device or USB cable connection ports.**  
This may cause electric shock or fire due to a short circuit.



## WARNING

---



Must be  
strictly  
adhered to

- **Always turn off the power when the device is not in use.**  
Failure to do so may result in fire, electric shock, injury, or burns.
- **Do not use the device near flammable substances such as thinner, benzene, or aerosol sprays.**  
Doing so may cause ignition, fire, or explosion.
- **If you notice any of the following abnormalities, stop using the device immediately and contact customer support.**
  - Battery swelling, unusual noises, or unusual odors
  - The device does not operate even after being fully charged
  - Operating time becomes extremely short
  - The device becomes excessively hot during chargingFailure to do so may result in fire, electric shock, or burns.
- **When using the device near the forehead, nape of the neck, or other sensitive areas, take care to prevent the hot surfaces from coming into contact with the skin.**  
Failure to do so may result in burns or injury.
- **Do not use the device on anything other than human hair.**  
Doing so may result in fire, burns, or malfunction.
- **Do not use the device on wet hair.**  
Doing so may cause burns or damage to the hair.
- **Do not touch the device or USB cable with hands that have hair styling products or similar substances on them.**  
Doing so may cause malfunction.
- **During use and immediately after use, the brush section and surrounding areas become hot. Do not allow them to come into direct contact with the skin.**
- **Do not leave the device unattended while powered on, or while the brush is still hot after use.**  
Doing so may cause fire.



## CAUTION

---




Must be  
strictly  
adhered to


- **Always use the USB cable supplied with this product.**  
**Do not use the included accessories with other products.**  
Failure to do so may result in malfunction or accidents.
- **Do not strike, crush, step on, drop, or place heavy objects on the device or battery.**  
Subjecting the product to excessive force or impact may result in injury or malfunction.
- **If the product will not be used for an extended period, fully charge the battery before storing it.**  
**In addition, operate the product and recharge it once every month.**  
If the battery is left uncharged for a long time, it may no longer be possible to recharge it.

# Name of parts

## Main Body

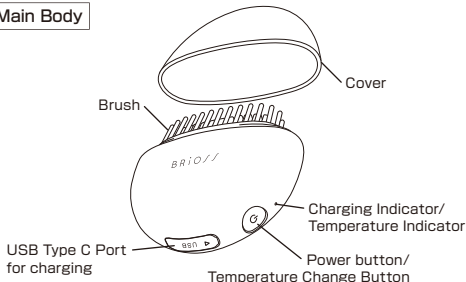

## Accessories

 

# Specifications

|                           |                                           |
|---------------------------|-------------------------------------------|
| Product Name              | BRiOSS Mobile Hair Iron                   |
| Model Number              | BR-MBI2611P                               |
| Power Mode                | Charging                                  |
| Charging Time             | 2.5 hours                                 |
| Rechargeable Battery      | Lithium Battery 3.7V, 2000 Mah            |
| Electricity Consumption   | 25W                                       |
| Auto Off (approximately)  | 10 minutes                                |
| Size                      | 79×99×32.5 mm                             |
| Weight                    | 109.2g                                    |
| Set Temperature           | 140°C, 160°C, 180°C                       |
| Continuous Operating Time | Approximately 1 hour (When used at 140°C) |

# How to Charge

## ⚠ CAUTION



- Please use AC adapter (below 5V 2A) that has PSE mark.
- Make sure the power is off while charging this device.
- The device is not fully charged during first use, please charge it before using.

- ① Insert the charging cable (USB Type-C) into the USB Type-C port located on the bottom of the device.

\*The cable can be inserted in either orientation and charging will work normally.

- ② Connect the charging cable's USB Type-A connector to a USB-compatible AC adapter. The LED on the bottom of the device will begin blinking, indicating that charging has started.

- ③ When charging is complete, the power LED will change from blinking to a steady light.

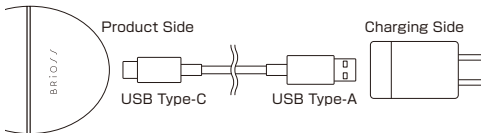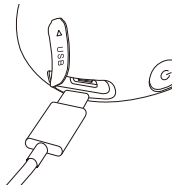

### ● Charging Time Required

| Charging Time           |
|-------------------------|
| Approximately 2.5 hours |

### ● LED Indicator During Charging

| Blinking Pink Light | Steady Pink Light |
|---------------------|-------------------|
| Charging in process | Charging complete |

# Before Use



## WARNING

Plate and material near plate will be in high heat during use, be careful while using it especially for hands and forehead area. This may cause burn.



## CAUTION

- Do not use the device immediately after coloring your hair. If hair dye pigments or chemicals adhere to the plates, they may damage the plate surfaces. Wait 3-4 days after coloring before using the device.
- If you have used a hair manicure (semi-permanent hair color), thoroughly wash the colorant out with shampoo and dry your hair completely before use. If the hair is still wet, the color may transfer and the pigments may adhere to and damage the product.
- Do not use the device immediately after a perm, straight perm, or hair-straightening treatment. Because the hair is more susceptible to damage after these treatments, wait at least 3-4 days before use.
- Do not use the device while applying products that contain the same active ingredients (reducing agents) as those found in home-use perm or hair-straightening solutions.
- Doing so may damage the hair.
- Do not use the device on wigs or hair extensions.
- This may cause discoloration, deformation, or deterioration.
- Do not use the device on severely damaged hair.
- Do not touch the area around the plates during or immediately after use, as it becomes extremely hot.
- Doing so may result in burns or injury.


# How to use

Before use, please dry and brush fringe throughoutly to make sure there is no entangled or loose hair.

- ① Remove the cap
- ② Long press the power/temperature  change button to power on the device.
- ③ Briefly press the Power/Temperature Button to select the desired temperature. The LED for the selected temperature will flash during heating. When the selected temperature is reached, the temperature indicator LED will stop flashing and remain steadily lit.

## ● Temperature and LED colors


| Temperature | 140℃  | 160℃   | 180℃ |
|-------------|-------|--------|------|
| LED Color   | Green | Orange | Red  |

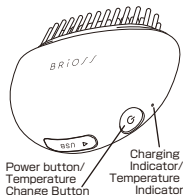

# How to use

- ④ When the LED indicator changes from blinking to a steady light, the selected temperature has been reached and the device is ready for styling. Hold a section of hair between your fingers and brush through it slowly from the inside.


\*Do not use the brush on the same section of hair for more than 5 seconds continuously.

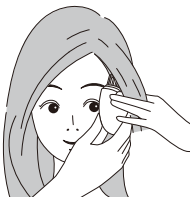

For smoothing flyaway hairs



For creating a shiny, straight finish

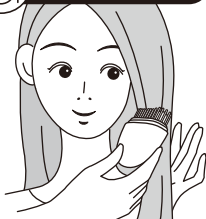

- ⑤ Always turn the power off after use. Allow the device to cool completely before attaching the protective cap and storing it.

\*To turn the power off, press and hold the Power button.

## Auto Power-Off Function

For safety, the device automatically turns off approximately 10 minutes after it is switched on.

## Choosing the Temperature

When using the product for the first time, start with a lower temperature setting. Adjust the temperature as needed based on your hair condition and the desired styling results.

# Cleaning and Storage

## Cleaning

---

Always turn off the power and allow the device to cool completely before cleaning or storing it. Failure to do so may result in electric shock or burns

- To clean the device, wipe any dirt or debris from the surface with a soft, dry cloth.  
If the dirt is difficult to remove, or if hair styling products have accumulated on the device or brush, wipe the affected areas with a soft cloth lightly dampened with a mild detergent diluted with water and wrung out well.
- Remove any hair, lint, or dust tangled in the brush.

## Storage

---

- Always attach the protective cap before storing the device.
- Do not store the device together with hairpins or other small objects.
- If foreign objects enter the device, they may cause malfunction.
- Do not leave hair styling products or cosmetics on the device or brush.
- This may cause deterioration, discoloration, or malfunction.
- Do not store the device in locations exposed to direct sunlight, inside vehicles under the hot sun, or in other high-temperature environments. Also avoid humid locations such as bathrooms. Store the device in a clean, well-ventilated place.
- Keep the device out of reach of small children and away from pets.
- If the device has been stored for a long period, check that there are no abnormalities before using it again.



### CAUTION

- Do not wash the device with water under any circumstances. Doing so may cause malfunction.
- Do not use alcohol, benzene, nail polish remover, or similar solvents. These substances may cause malfunction, damage to parts, or discoloration.

# Troubleshoot?

The following are examples only. If you perform the recommended corrective actions and the problem is not resolved, be sure to contact customer support. If it is determined that the customer has disassembled, modified, or repaired the product, it will not be covered under the warranty. Please also refer to Item 5(1) of the Free Warranty Regulations (page 14)

| Problem                      | Check/Action                                                                                                     | How to solve                                                                                                                     |
|------------------------------|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| The plate does not heat up   | Is the unit charged?                                                                                             | Charge it for approximately 2.5 hours. (See page 6.)                                                                             |
|                              | Is it currently charging?                                                                                        | This product cannot be used while charging.                                                                                      |
| The battery cannot be charge | Has the USB connector come loose from the unit's connection terminal or from the USB port of the USB AC adaptor? | Plug it in securely                                                                                                              |
|                              | Has the USB AC adapter come unplugged from the power outlet?                                                     | Plug it in securely                                                                                                              |
| The power is not on          | Did you press and hold the power button for at least 2 seconds?                                                  | Press and hold the power button for at least 2 seconds, and check whether the temperature indicator LED lights up. (See page 7.) |

